

CIRCUS TRIO
#213 3

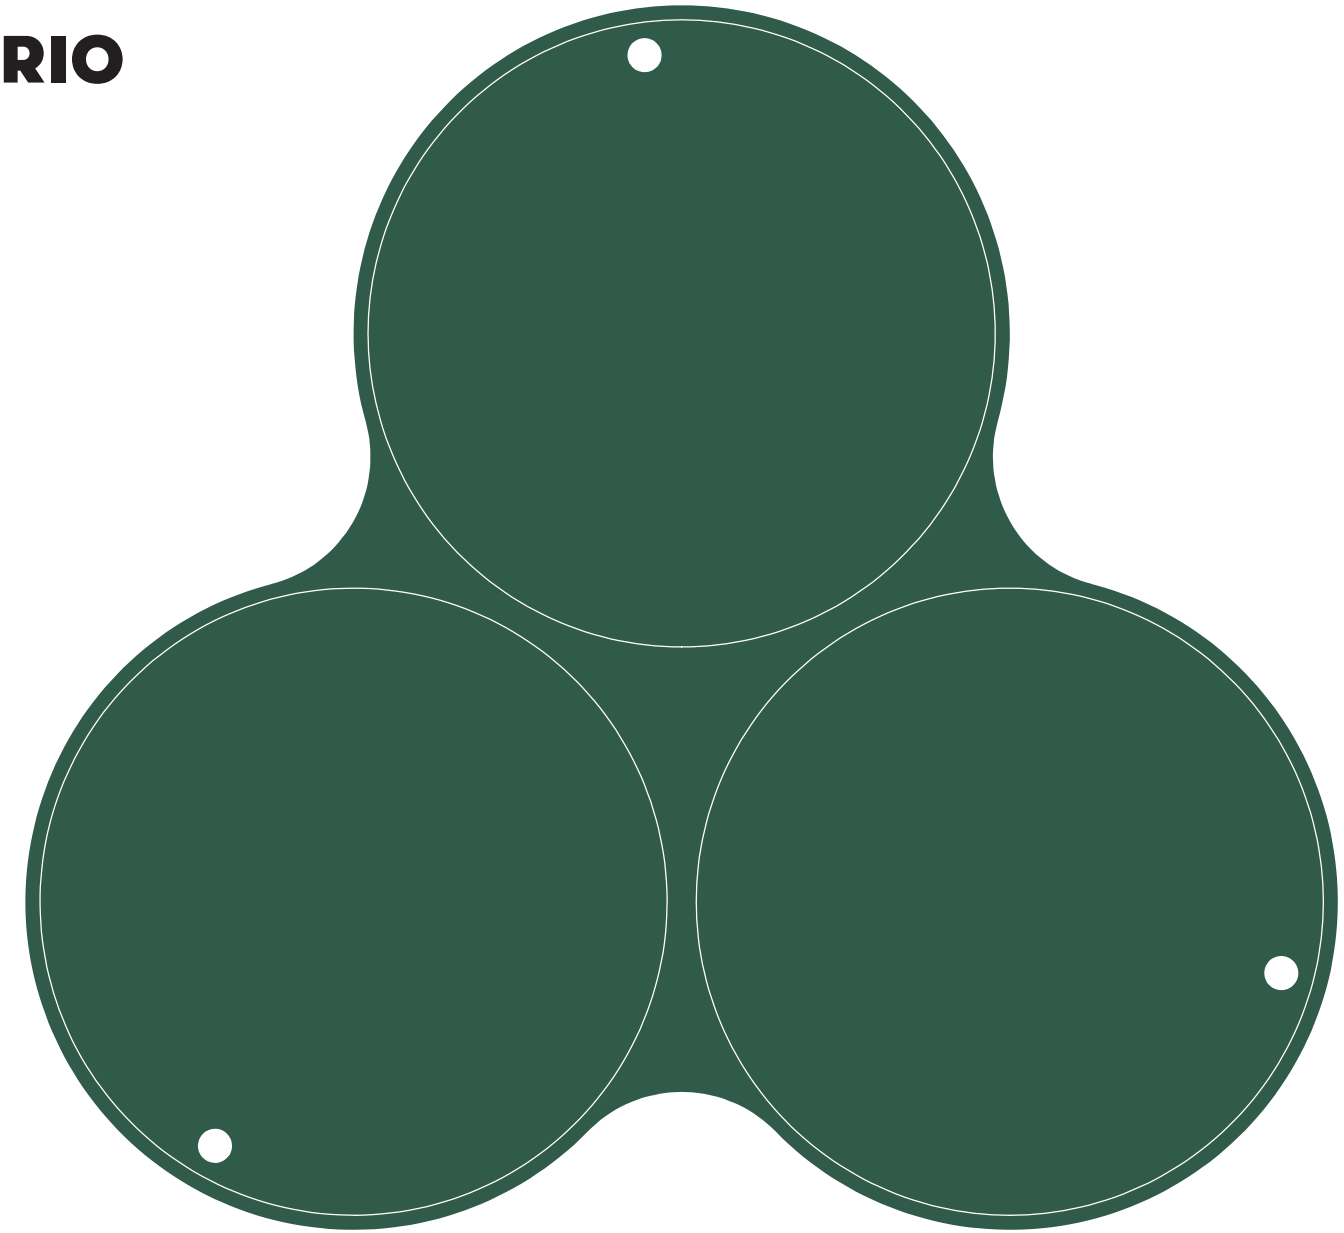

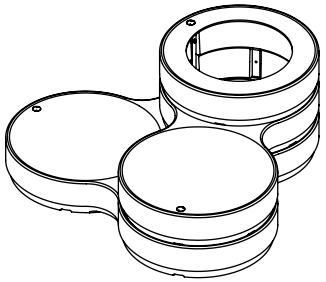

out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S

info@out-sider.dk
www.out-sider.dk

outsider

GB
DK/DE/ES/FR

INDEX: **PAGE**

Item list..... **01-02**
Vareliste/ Artikelliste/ Lista de artículos/ Liste d'articles

Preparing the bases..... **03**
Klargøring af baserne/Vorbereitung die basen/Preparación de las bases/Préparation les bases

Connection Bracket B17..... **03**
Samlebeslag/Verbindungsbeschlag/Herraje de unión/Ferrure d'assemblage

Connection Bracket B18..... **04**
Samlebeslag/Verbindungsbeschlag/Herraje de unión/Ferrure d'assemblage

Filling..... **05**
Påfyldning/ Füllung/ Relleno/ Remplissage

HPL/Wood Seat top Fixation..... **05-07**
Montering af sædetop/Befestigung der Sitzfläche/Fijación de la parte superior del asiento/Fixation de l'assise


Planter / Seat & Planter top Fixation B21..... **07-09**
Beslag til plante top/ Pflanzküben-Deckel Befestigung/ Fijación de la parte superior de la jardinera/ Fixation du dessus du bac á plantes

Ground Fixation B19..... **10**
Nedgravning/ Bodenbefestigung/ Fijacón al suelo / Fixation au sol


Surface Fixation B20..... **10**
Overflademontering/ Oberflächenmontage/ Superficie Montanosa/ Montage en saillie

ITEM LIST
ELEMENTLISTE/ARTIKELLISTE
LISTA DE ARTICULOS/ LISTE DES ARTICLES


#213 81 xx BASE 1

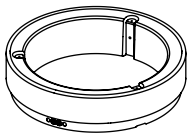


#213 82 xx BASE 2

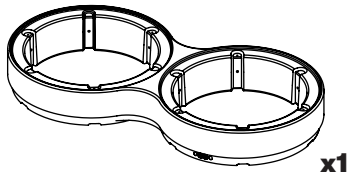


#213 83 xx BASE 3

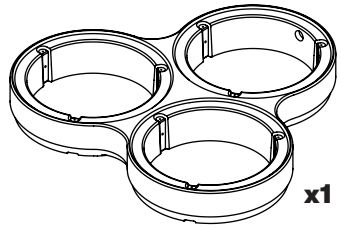


#213 91 xx HPL Seat

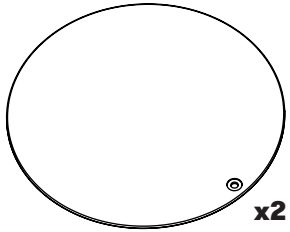


#213 94 xx HPL Planter

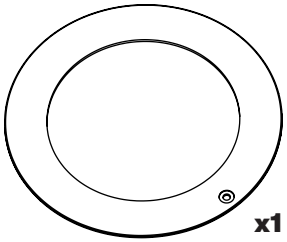

ASSEMBLY KIT HPL SEAT

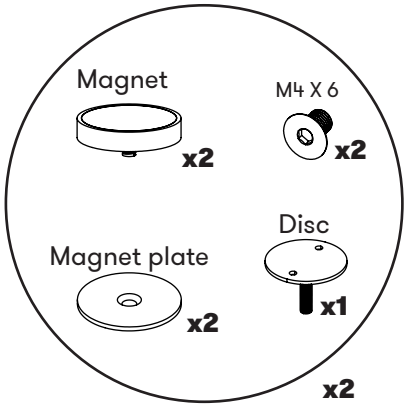

ASSEMBLY KIT HPL PLANTER TOP

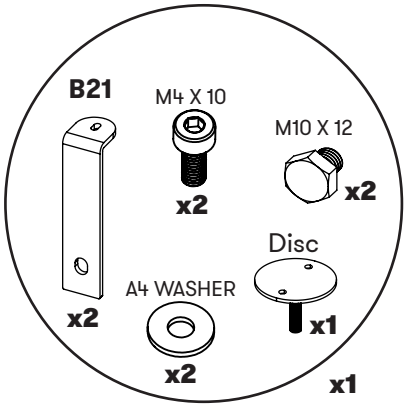


out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S

info@out-sider.dk
www.out-sider.dk


outsider

ITEM LIST
ELEMENTLISTE/ARTIKELLISTE
LISTA DE ARTICULOS/ LISTE DES ARTICLES

TRIO CONNECTION KIT

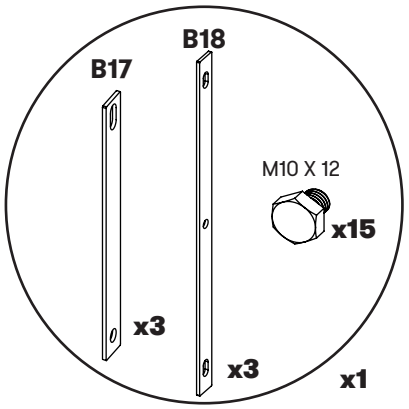



TOOLS

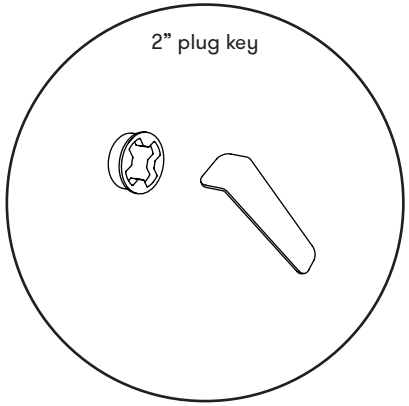

TOOLS NEEDED NOT INCLUDED


NØDVENDIGT VÆRKTØJ MEDFØLGER IKKE/BENÖTIGTES WERKZEUG NICHT ENTHALTEN
HERRAMIENTAS NECESARIAS NO INCLUIDAS/OUTILS NÉCESSAIRES NON INCLUS

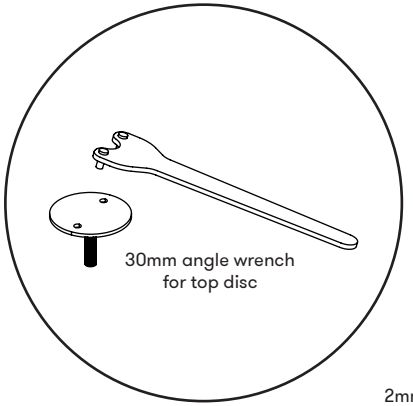

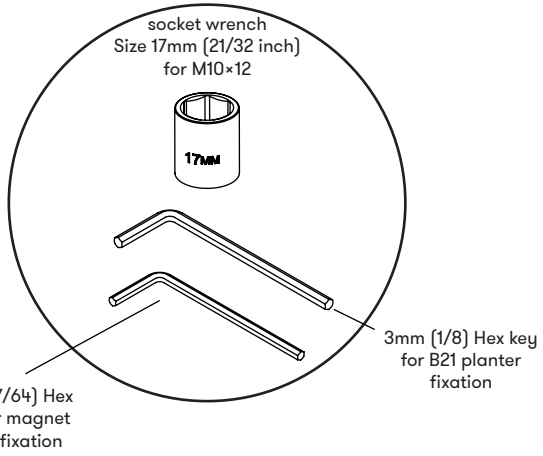


TO BE ORDERED
SKAL BESTILLES/ZU BESTELLEN/POR ORDENAR/À COMMANDER


GROUND FIXATION

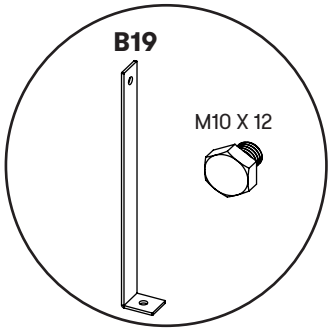


SURFACE FIXATION

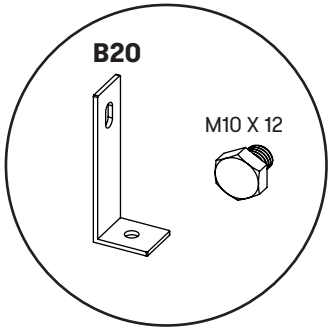


CONCRETE BLOCK

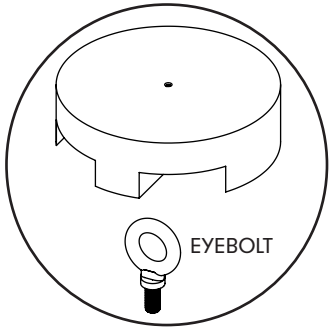


213 00 WOOD TOP

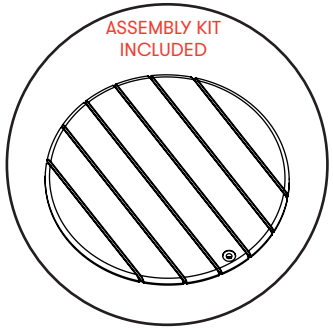


213 94 xx SEAT & PLANTER TOP

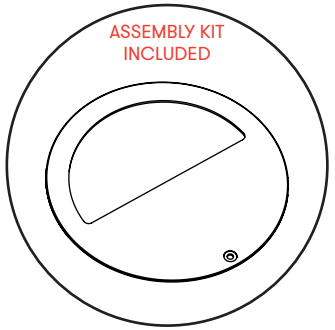

WHEELS & FEET

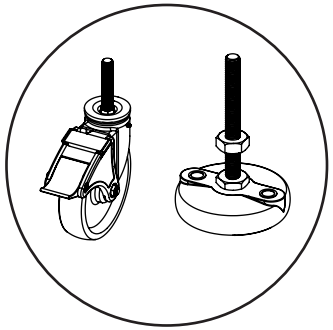


ASSEMBLY KIT WOOD TOP

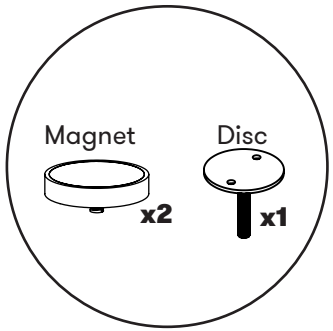

out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S


info@out-sider.dk
www.out-sider.dk

outsider


TRIO 

PREPARING THE BASES
KLARGØRING AF BASERNE/VORBEREITUNG DIE BASEN
PREPARACIÓN DE LAS BASES/PRÉPARATION LES BASES


1. STACK THE BASES
STABLE DE BASER/STAPELN SIE DIE BASEN
APILE LAS BASES/EMPILEZ LES BASES

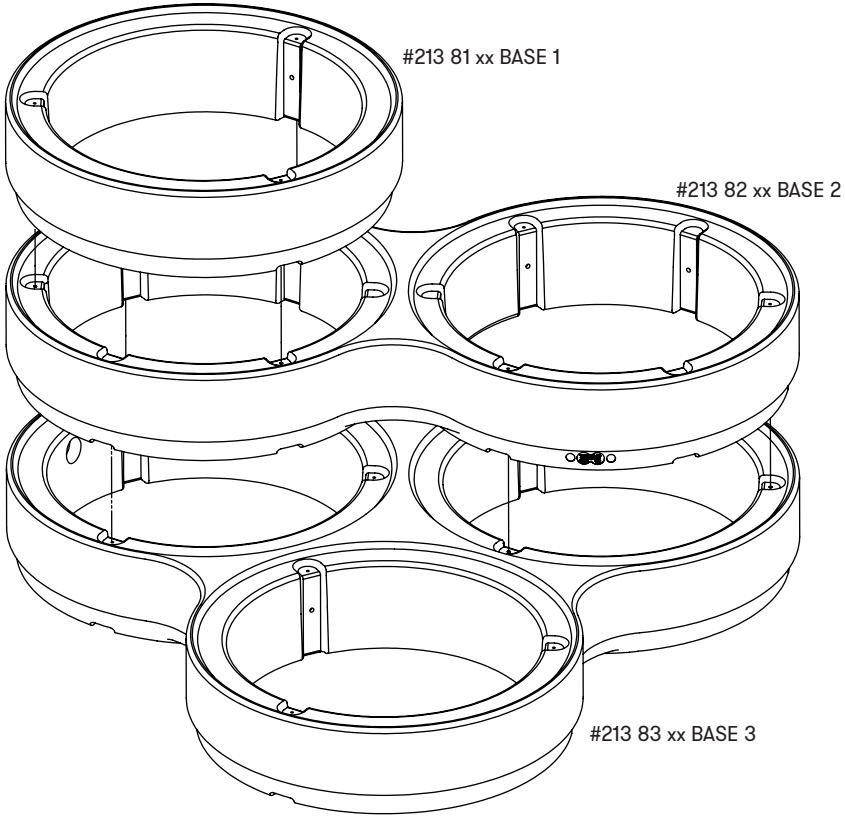


2. ALIGN THE INSERTS
TILPAS INDSATSERNE/RICHTEN SIE DIE EINSÄTZE AUS
ALINEE LAS INSERCIONES/ALIGNEZ LES INSERTS

TRIO 

B17 - CONNECTION BRACKET
SAMLEBESLAG / VERBINDUNGSBESCHLAG /
HERRAJE DE UNIÓN / FERRURE D'ASSEMBLAGE

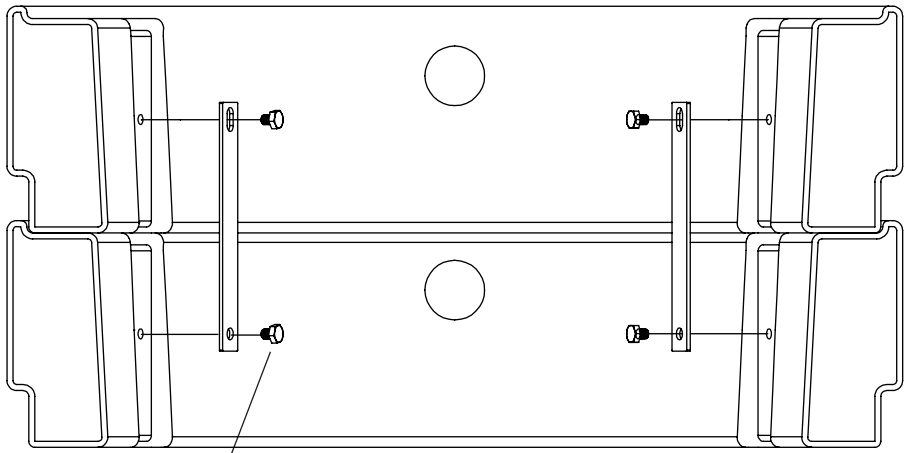


x6
M10 X 12

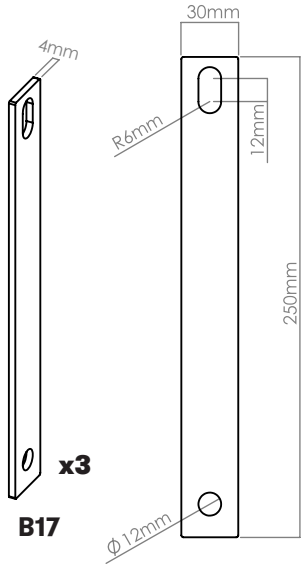


x3
B17

out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S
info@out-sider.dk
www.out-sider.dk


outsider


TRIO



B18 - CONNECTION BRACKET

SAMLEBESLAG / VERBINDUNGSBESCHLAG /
HERRAJE DE UNIÓN / FERRURE D'ASSEMBLAGE

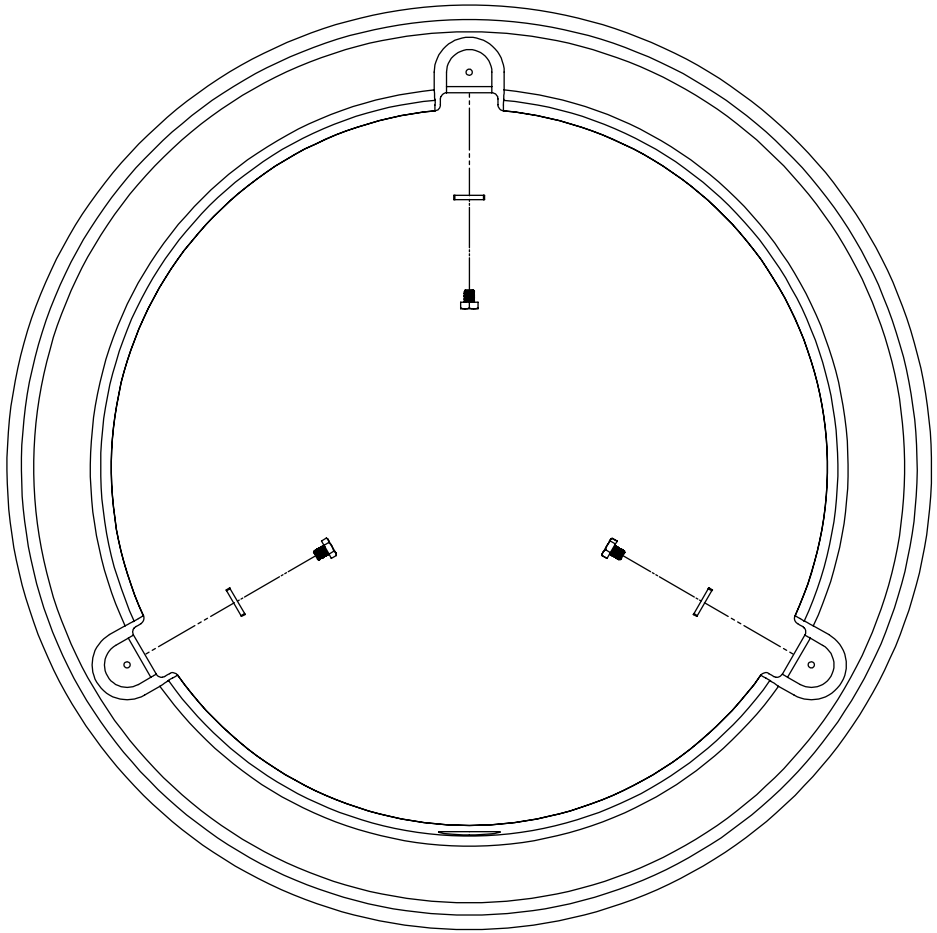

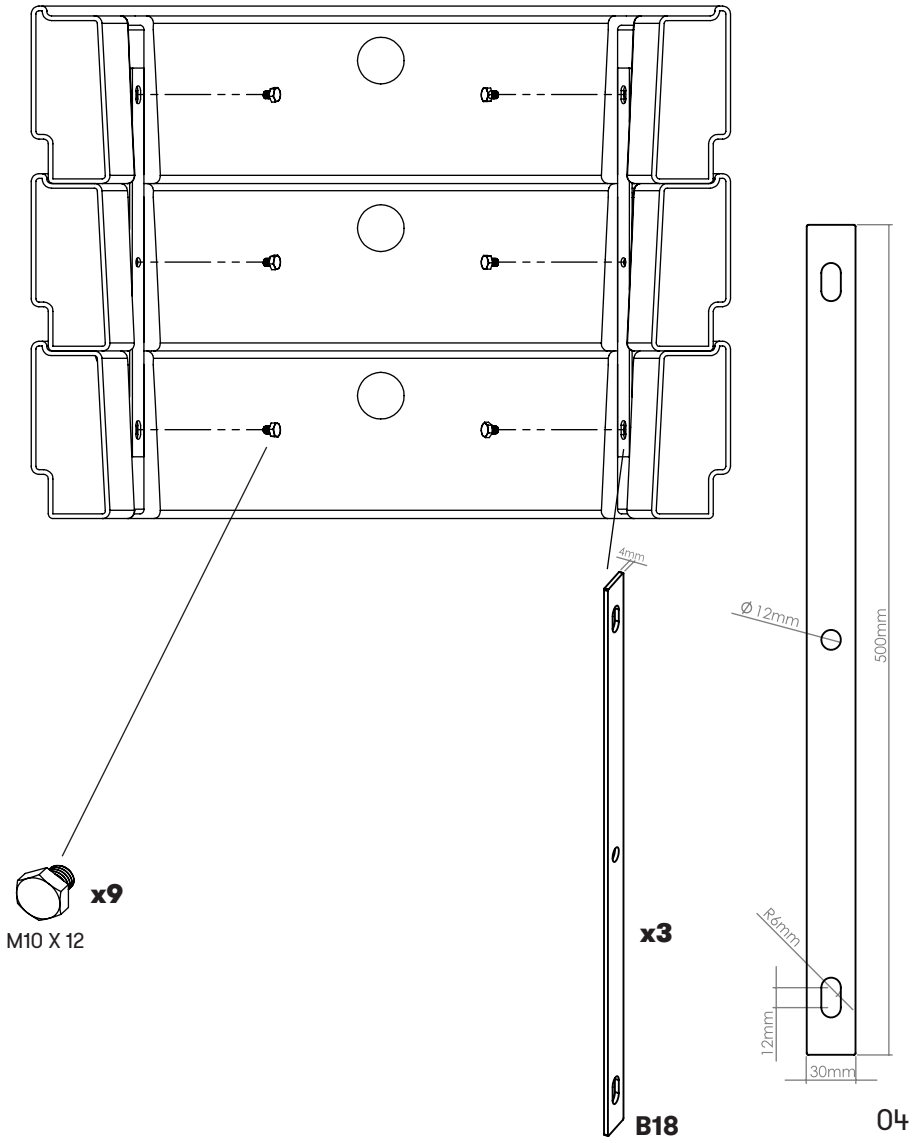


04


out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S


info@out-sider.dk
www.out-sider.dk


outsider





WATER
VAND/WASSER/AGUA/EAU

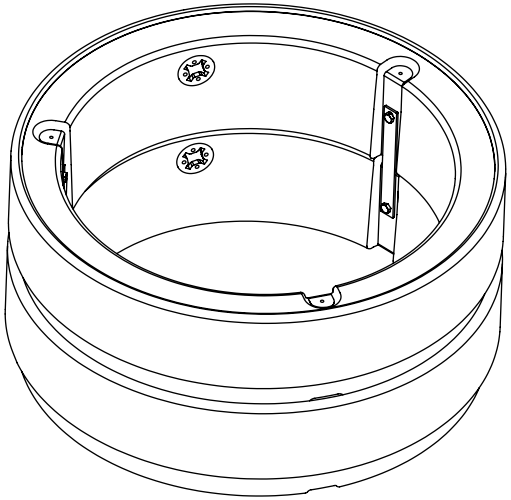

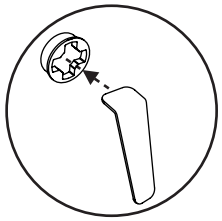

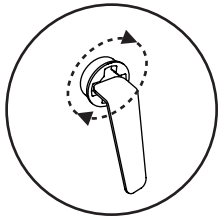

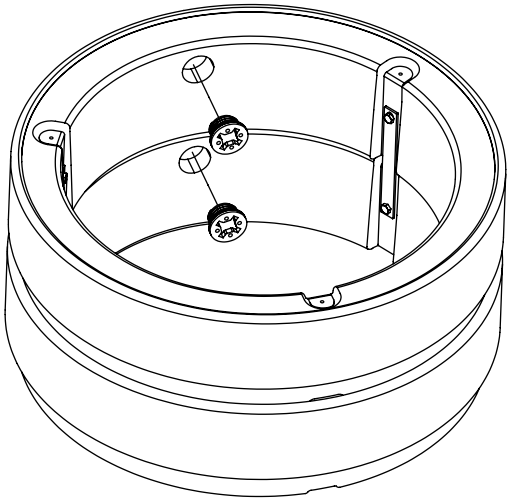

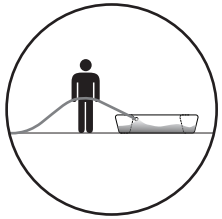

SOLO (16 kg)
+ 60 L
~ 76 kg


Measurements are excl top


TRIO



HPL/WOOD SEAT TOP - FIXATION ASSEMBLY
MONTERING AF SÆDETOP/BEFESTIGUNG DER SITZFLÄCHE/ FIJACIÓN DE LA PARTE SUPERIOR DEL ASIENTO/ FIXATION DE L'ASSISE

1. MAGNET
IMÁN/AIMANT

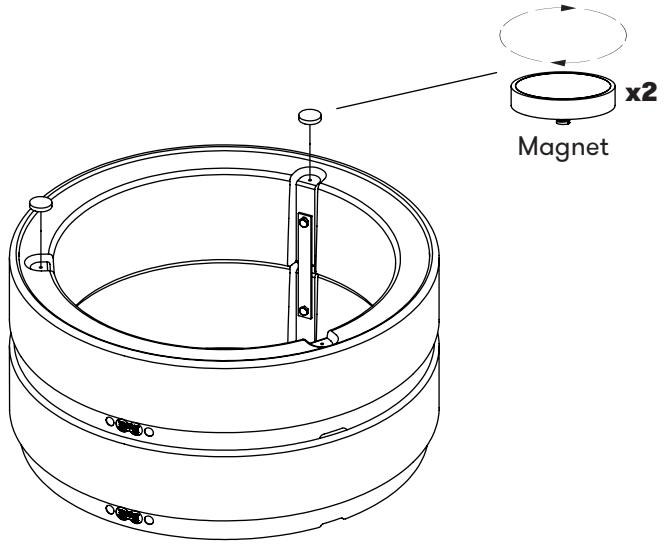

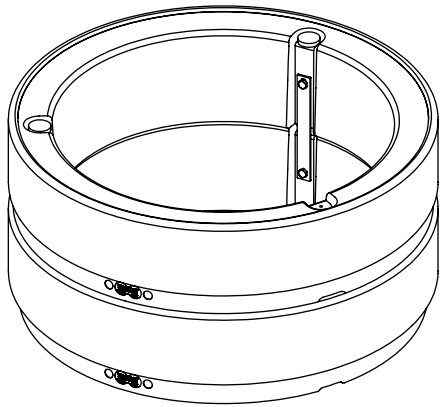

Measurements are excl top

out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S

info@out-sider.dk
www.out-sider.dk


outsider


TRIO



2. MAGNET PLATE ONLY FOR HPL TOP

MAGNETPLADE/MAGNETPLATTE/PLACA MAGNÉTICA/PLAQUE MAGNÉTIQUE

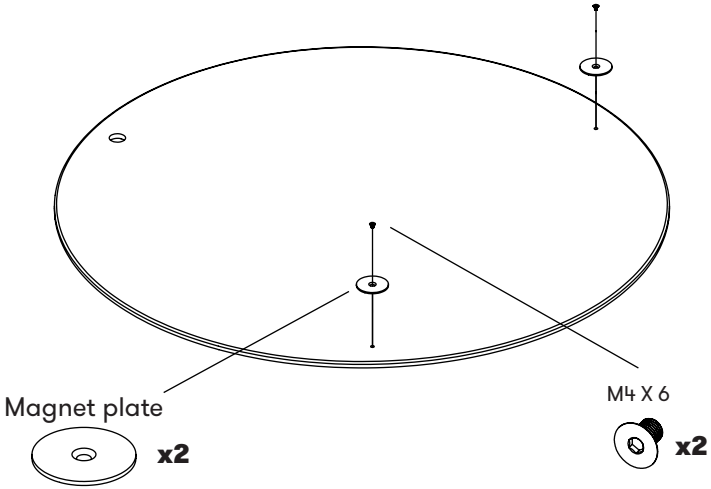

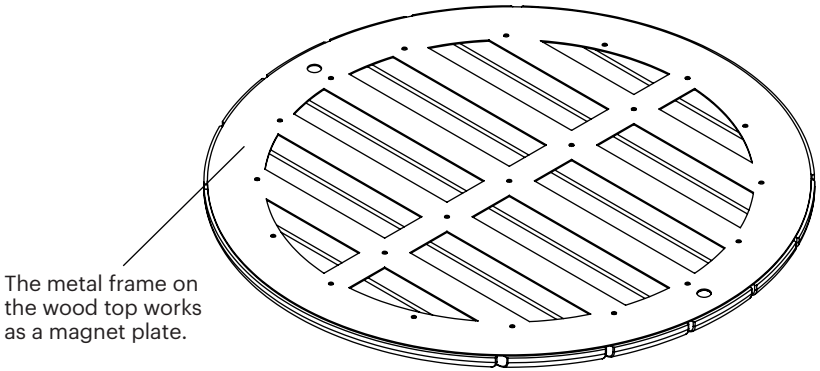


3. FITTING THE TOP


MONTERING AF TOPPEN/
MONTAGE DES DECKELS/
COLOCATIÓN DE LA TAPA/
INSTALLATION DU DESSUS

1. Align the magnet plates on the top with the magnets in the base.

2. Gently lower the top connecting the magnets.

Make sure the insert in the base align with the hole in the top

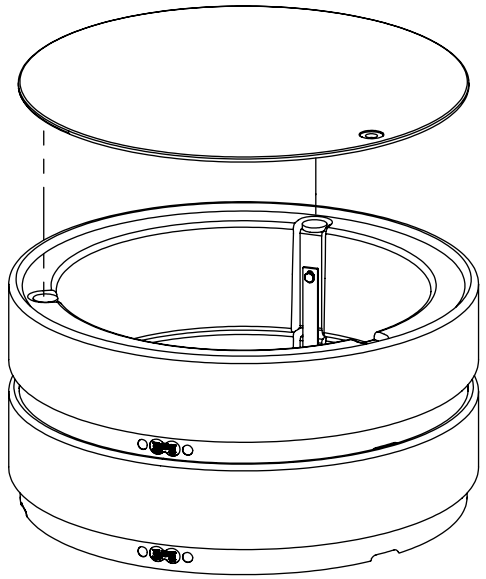


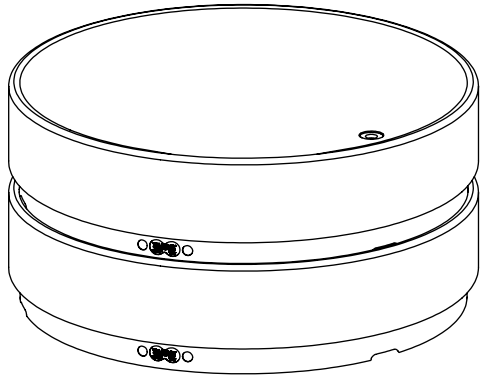

out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S

info@out-sider.dk
www.out-sider.dk

outsider

TRIO 

4. TIGHTEN THE DISC


STRAM DISKEN/SCHEIBE ANZIEHEN
APRIETE EL DISCO/SERREZ LE DISQUE

1. Place the disc in the top hole and tighten it with your hands.


Make sure to keep it vertical


2. Tighten the disc with the wrench spanner.

Do not over overtighten

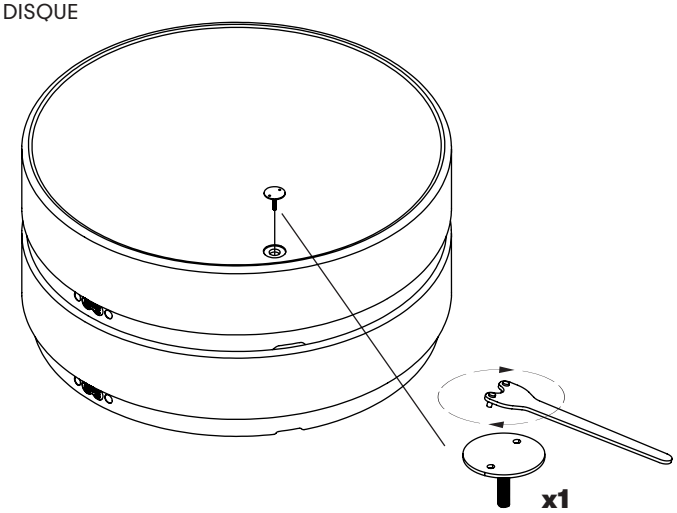

Disc

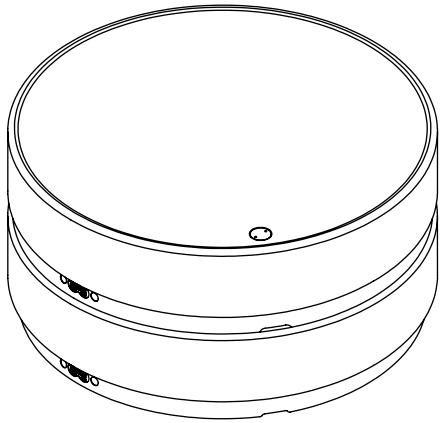

TRIO 


B21 - PLANTER/SEAT & PLANTER TOP FIXATION

MONTERING AF PLANTE TOP/BEFESTIGUNG DES PFLANZKÜBEL-DECKELS/FIJACIÓN DE LA PARTE SUPERIOR DE LA JARDINERA/ FIXATION DU DESSUS DU BAC Á PLANTES


1A. BRACKET FIXATION

FASTGØRELSE AF BESLAG/HALTERUNGSBEFESTIGUNG/FIJACIÓN DEL SOPORTE/FIXATION DU SUPPORT


Place the top up-side down and fixate the B21 bracket with the M4X10 with the washer inbetween.

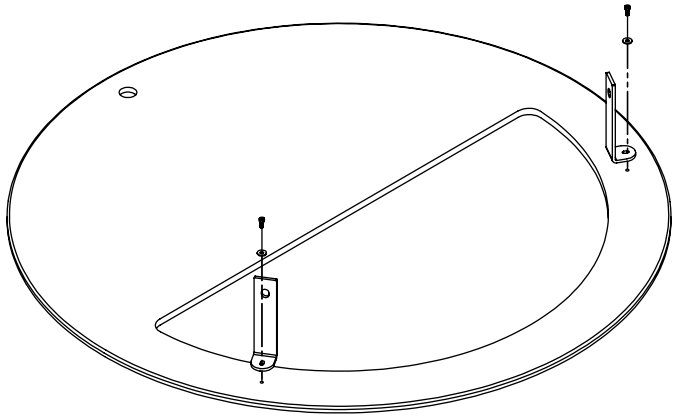


Make sure to protect the top surface when placing it up-side down





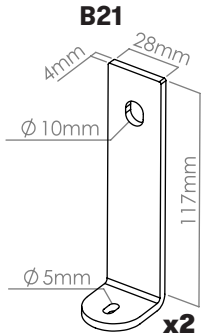


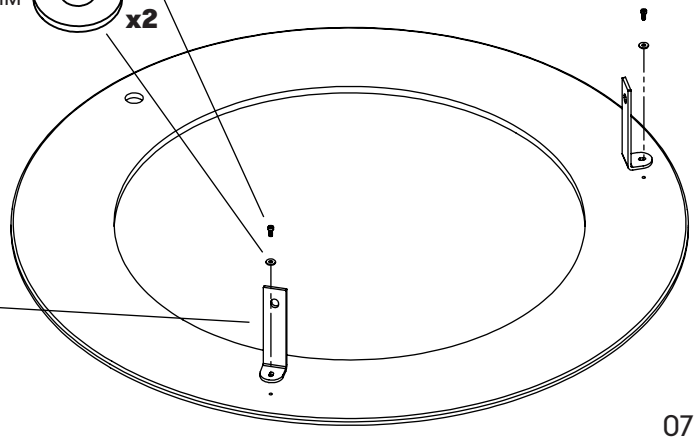

out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S


info@out-sider.dk
www.out-sider.dk


outsider

TRIO 

1B. BRACKET FIXATION

FASTGØRELSE AF BESLAG/HALTERUNGSBEFESTIGUNG/FIJACIÓN DEL SOPORTE/FIXATION DU SUPPORT

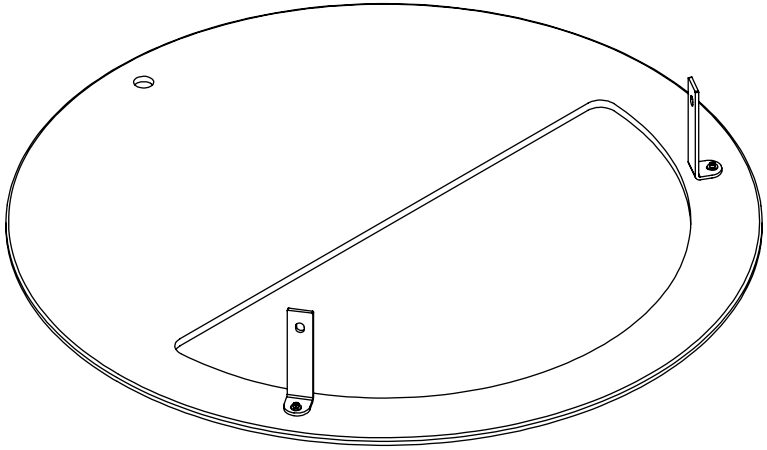


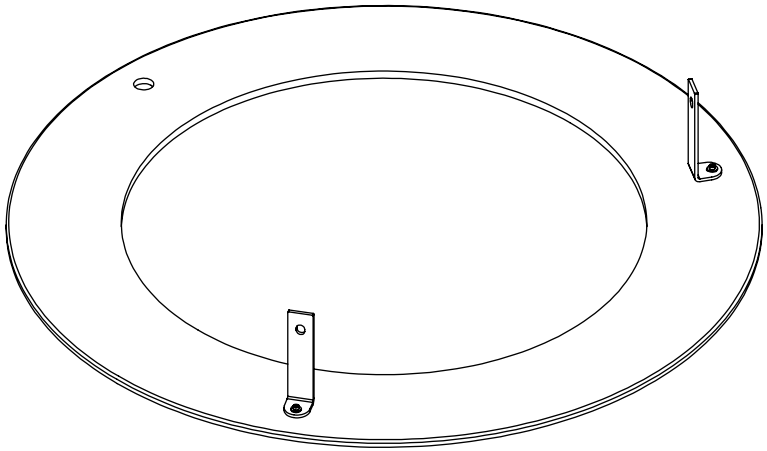


2. PLACE THE TOP ON THE BASE

PLACER TOPPEN PÅ BASEN/
SETZEN SIE DEN DECKEL AUF DEN BODEN/
COLOQUE LA TAPA SOBRE LA BASE/
PLACEZ LE DESSUS SUR LA BASE

The B21 bracket can be fit on the inside and the outside of the connection brackets B17 and B18.

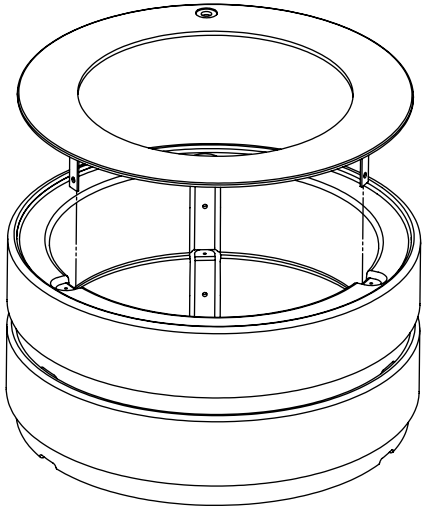

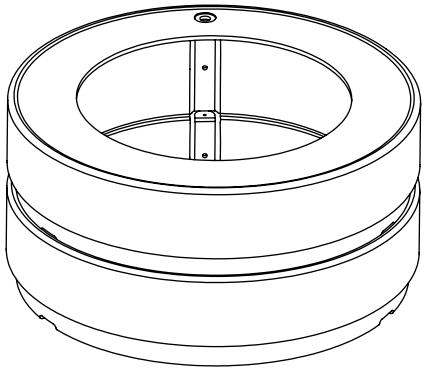


out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S

info@out-sider.dk
www.out-sider.dk

outsider

TRIO




3. BASE & TOP FIXATION

FASTGØRELSE AF BASE & TOP/
BEFESTIGUNG VON BODEN UND
DECKEL/FIJACIÓNDE LA BASE Y LA
PARTE SUPERIOR/FIXATION
DE LA BASE ET DU DESSUS

Fixate the B21 bracket into the insert in the base with the M10x12

Keep in mind if your are using connection or/and ground/surface brackets to place them aligned so the connection bracket is fixated straigt.

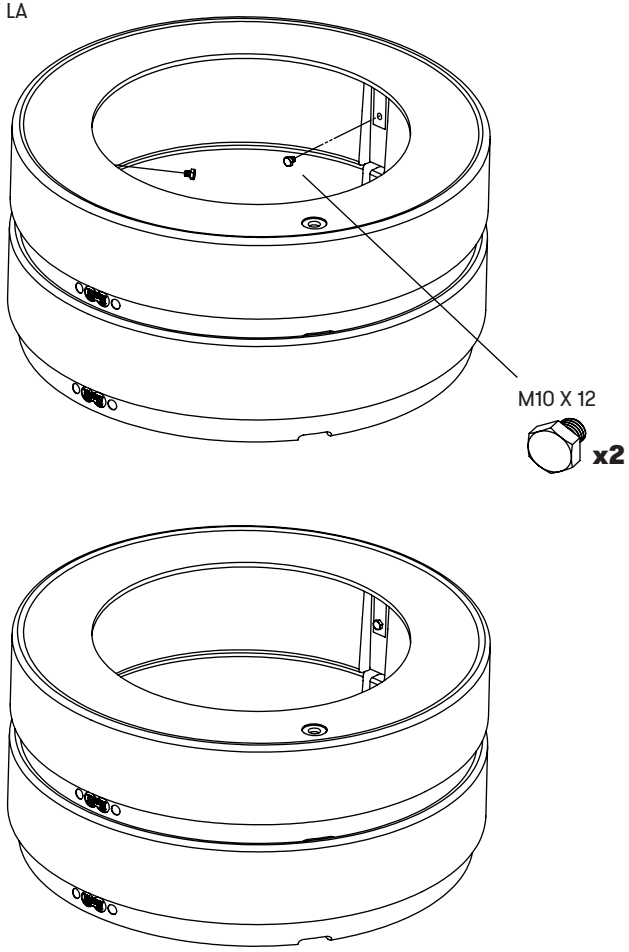

4. TIGHTEN THE DISC


STRAM DISKEN/SCHEIBE ANZIEHEN
APRIETE EL DISCO/SERREZ LE DISQUE

1. Place the disc in the top hole and tighten it with your hands.

Make sure to keep it vertical

2. Tighten the disc with the wrench spanner.

Do not over overtighten

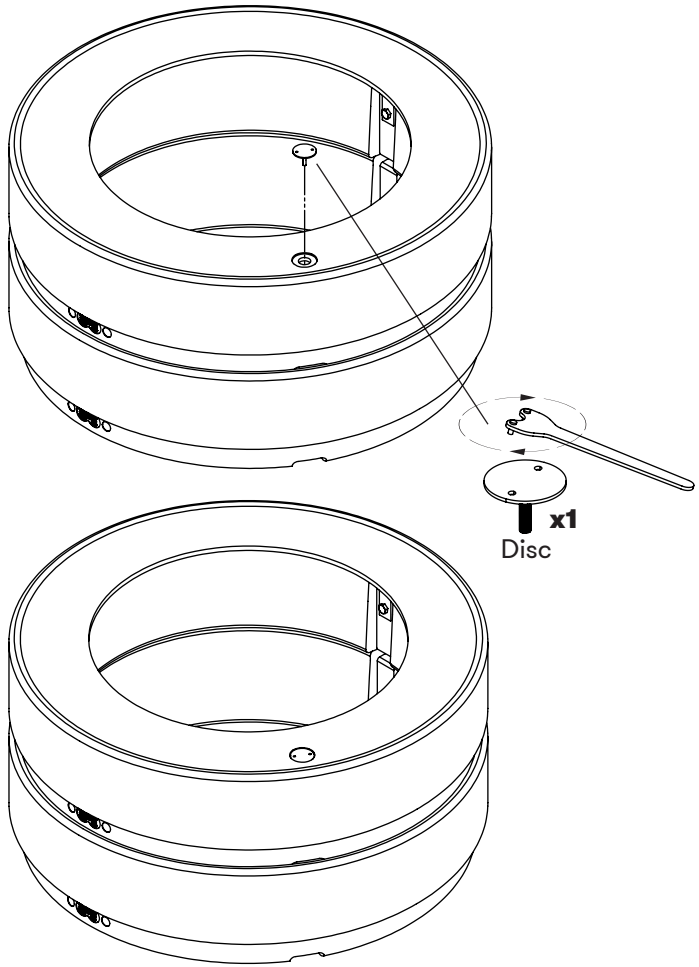


out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S

info@out-sider.dk
www.out-sider.dk


outsider

TRIO




B19 - GROUND FIXATION BRACKET

NEDGRAVNING / BODENBEFESTIGUNG /
FIJACÓN AL SUELO / FIXATION AU SOL

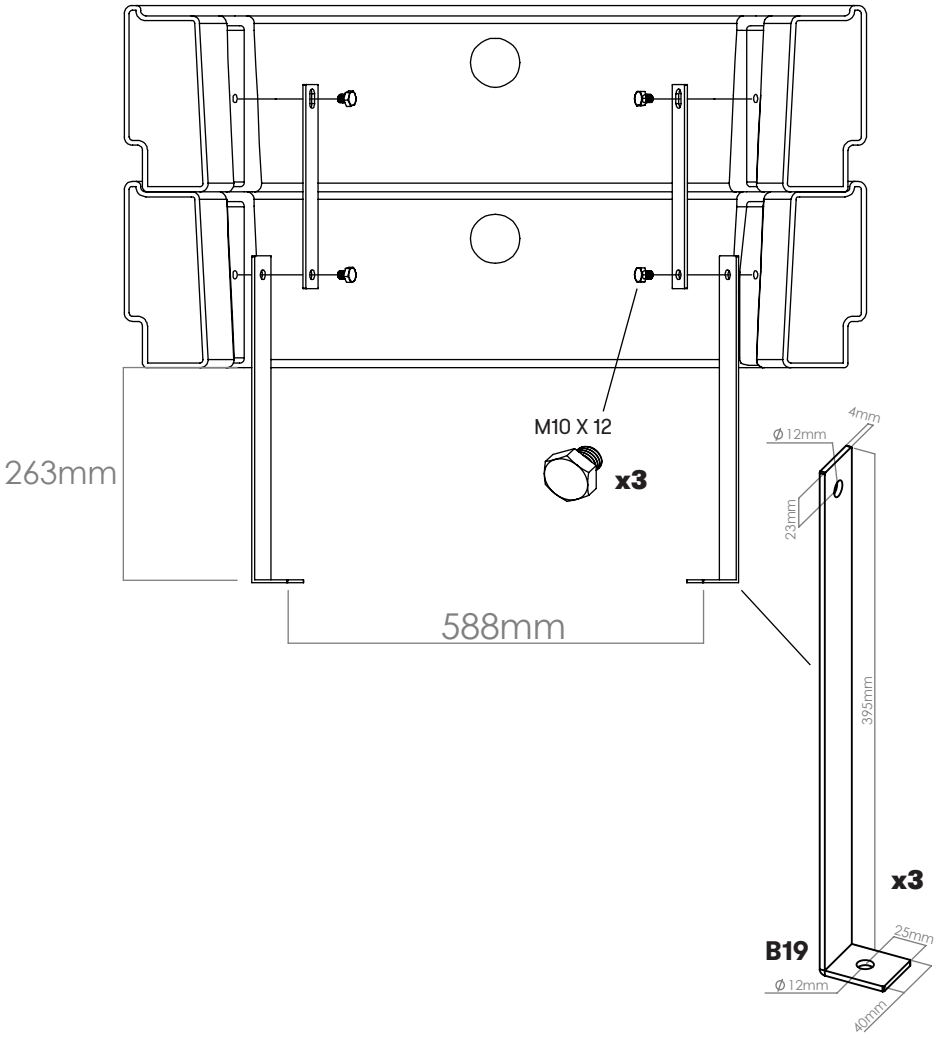


TRIO



B20 - SURFACE FIXATION

OVERFLADEMONTERING/OBERFLÄCHENMONTAGE/
SUPERFICIE MONTANOSA/MONTAGE EN SAILLIE

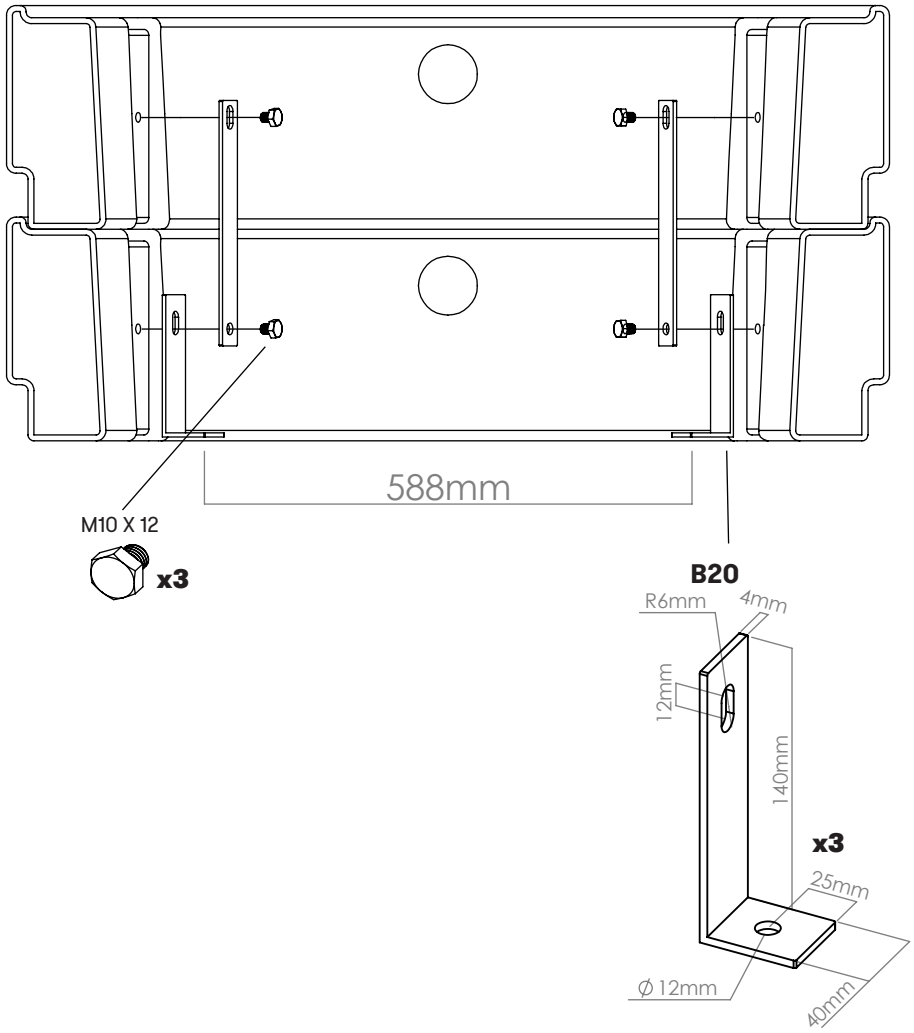

out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S

info@out-sider.dk
www.out-sider.dk

outsider